



Change the connections
on the control panel
Ø8 Packer Inflation
Ø6 Valve Control

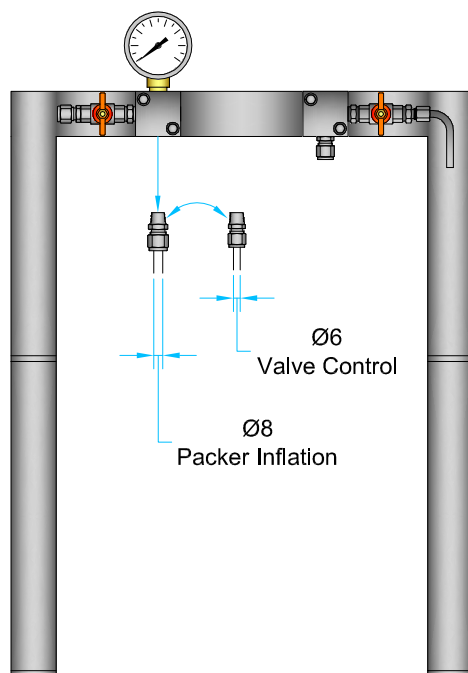

Opening the valve by
pumping, the valve
opens at low pressure
but can accept pressure
up to 20 bar

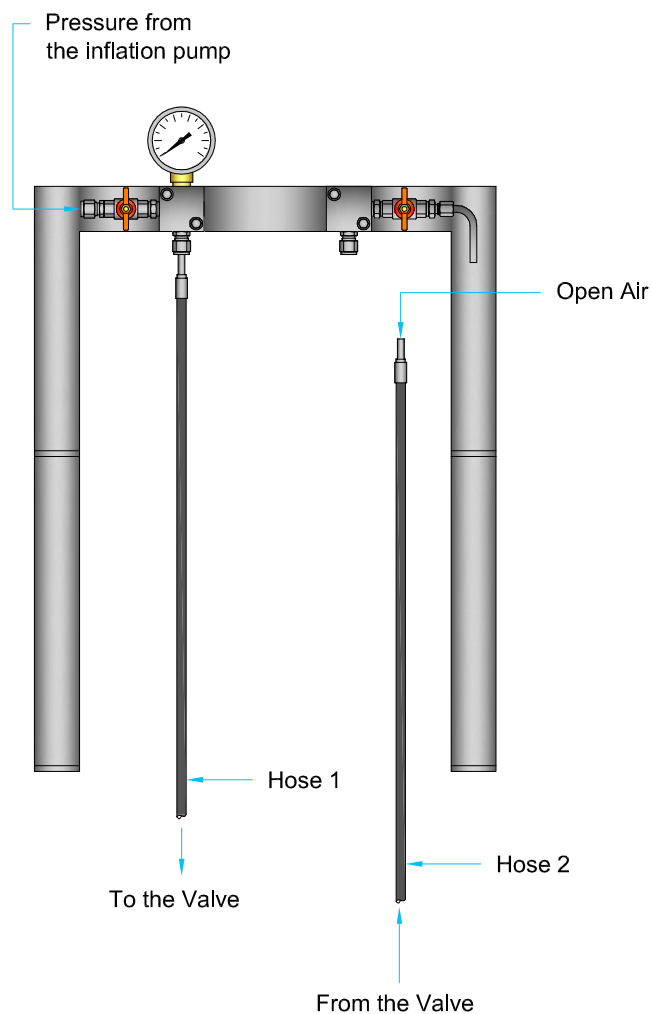

Closing the valve by
pumping, the valve
closes at low pressure
but can accept pressure
up to 20 bar

